


NOVA LUCE




1 Turn off the general Switch







2 Alight where to make holes




4 Apply screws

3 Drill and apply plastic anchors






5 Connect the wires correctly



6 Apply the side screws to finish it

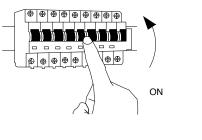

 $7\,$ Turn on the general Switch



