


NOVA LUCE

9011311, 9011312

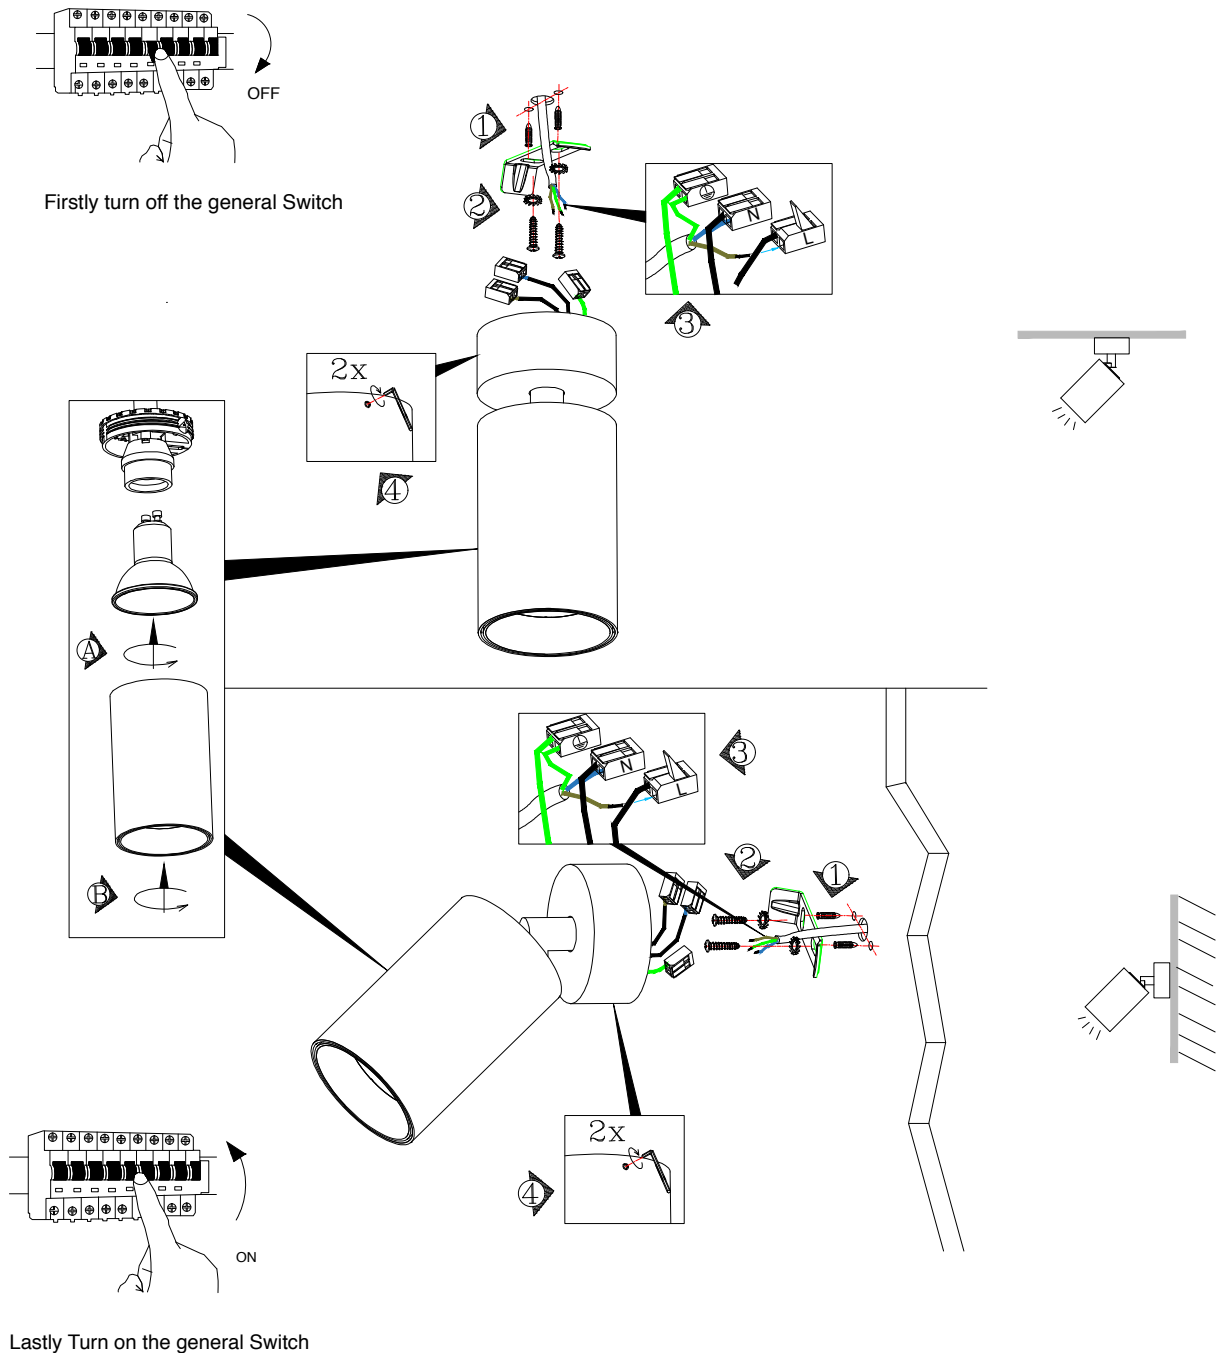

1. Make holes where you want your product to be
2. Align it and place the screws with the plastic anchors
3. Connect the wires
4. Apply the screw screws

- By rotating you can Ensemble the product