



NOVA LUCE


9081351 9081352

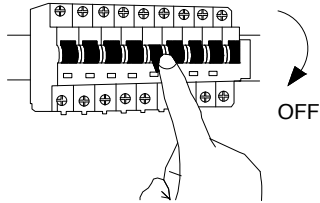


1 Turn off the general Switch

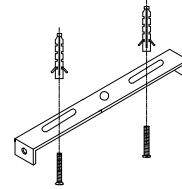


2 Align, mark and drill holes
To apply the screws

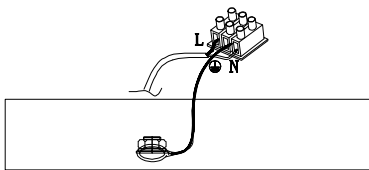


3 Connect the 3 wires

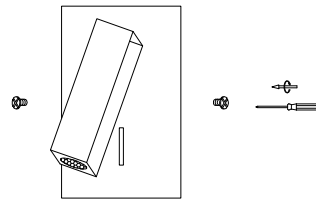

4 Apply the Side screws

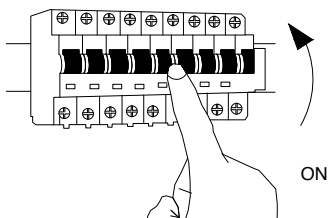

7 Turn on the general Switch

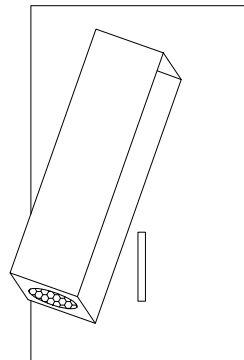

DIVA LUCE

9081351- 9081

