



# NOVA LUCE


9695219

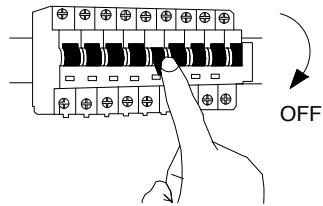


1 Turn off the general Switch

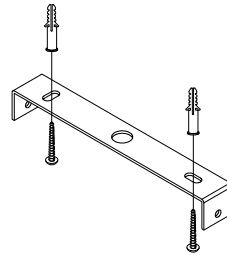


2 Align, mark and drill holes

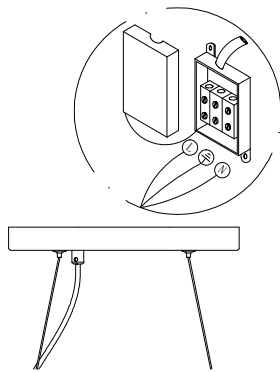


3 Connect the 3 wires

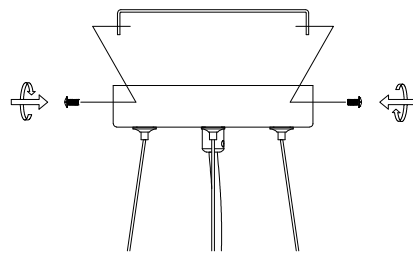

4 Apply the screws

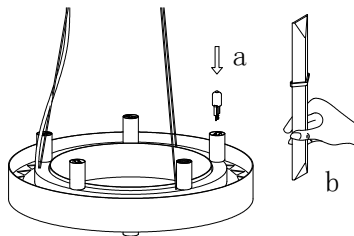

5 Connect the bulb with the crystal

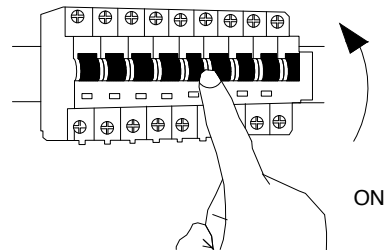

6 Turn on the general Switch

